

READING THE SCREEN

What the display is telling you — including the one element that means two different things depending on when it blinks.

THE TWO SCREENS — IDLE, AND MID-CALL

MAIN SCREEN

NOTHING HAPPENING

PTT destination

Where your next transmission goes. Long-press Down to change it; a saved server shows by name.

Main logo

Shown when idle. Replaceable under Display / keypad settings.

Button hints

The bottom strip shows what long-pressing Up and Down does on this screen.

WHEN IT BLINKS

TWO VERY DIFFERENT MEANINGS

Blinking continuously

The server is not reachable. Start troubleshooting here.

Blinking after a call

Call hold reply. It's showing the destination of the DMR or NXDN call you just received — press PTT to adopt it.

Call timer blinking

The call has ended. Duration of the blink is the **Call hold** setting.

ONGOING CALL

WHO, WHAT, HOW

Destination / Source

Call sign or ID at each end.

Source info

Line 1: source name and ID. Line 2: the station's broadcast message — **this is where Talker Alias shows up** on DMR.

Call info

Protocol (DMR, C4FM ...), codec (PCM, A3K ...), or type: **prv** private, **data** data call.

Audio meter

Incoming level.

STATUS ICONS

TOP OF THE SCREEN

Battery

Level · charging · unknown · **charger error**.

A fast-blinking charge LED by the USB port is a charger fault — change cable, port or charger.

Wi-Fi

Strength when connected; **animating** while getting an IP or roaming; separate icons for AP mode and disconnected.

Three more

New message · keypad locked · speaker muted.

THE MENU — OK/MENU FROM EITHER SCREEN

MAIN MENU

ALWAYS PRESENT

- Keypad Lock
- Quick Setup
- Messages
- Settings
- **About** — device UID and firmware version live here

SETTINGS SUBMENU

EVERYTHING ON-DEVICE

- Connector switch
- Config profiles
- Wi-Fi — connect, reconnect, disconnect, AP mode, saved networks, network settings
- Display settings
- Owner information
- Initialization setup
- Reset profile · **Factory reset**

CONNECTOR-SPECIFIC

APPEARS ONLY WHEN RELEVANT

Broadcast active

Bcast neighbors — other M1KEs nearby or on the same network.

Quick Call

Quick Call and Quick Call Favs.

AllStarLink active

Show ASL linked nodes · Hang up call · Call · DTMF.

CALL LOG

LONG-PRESS UP

Scroll it with Up and Down; close it with Power/Back. The web interface can **export the whole log as CSV** from the Status page.